

## Transmitter ( STA ) Video module RAK566 user manual

RAK566 is a long range 5.8G WIFI video module with Full HD(1080P@30FPS) transmitting.

- 1080P(1920\*1080)@30FPS;
- 720P(1280\*720)@30FPS;
- VGA(640\*480)@30FPS.

### PIN Definition



Label 1 Power definition    Label 2 Data(UART) definition

Pin	Name	Description	Pin	Name	Description
1	VDDIN	12V VCC	1	NC	
2	VDDIN	12V VCC	2	UART1_TXD	UART1 TX , DATA
3	GND	GND	3	UART1_RXD	UART1 RX , DATA
4	GND	GND	4	GND	GND

Notes: the power interface strictly prohibit to connect other connector . Or that must damage the module . Label 2 have been removed from Hardware version V1.2.

### DATA INTERFACE :

This UART is using for TRANSPARENT DATA .The socket will use UDP protocol .The IP address is the module' s valid IP address , and the UDP port is 1008 .

When the wifi device(smart phone) connect the softAP , the wifi device(smart phone APP) must open the UDP socket , and then send data to RAK566 module firstly . Once the module get the data , the data will be send out via UART and the module will remember the wifi device' s IP and UDP PORT. After that the module can send data back once the module receive data via UART .

Before Sending data to the module , you must add the protocol head (0x01 0x55) before the valid data . The module will cut off the protocol head and send the valid data via UART to the host MCU . The host MCU send the valid data to the module via UART . The module will add the protocol head(0x01 0x55) again before sending to wifi device .so the smart phone APP will get the data including protocol head.

Such as, all data is HEX data .

sending : **01 55 66 88 99 00 44**(5bytes valid data )

ACK: **01 55 88 99 00 44 33**(5bytes valid data)

### DIP Switch definition




Notes : The DIP Switch is using for some new function . Must keep the lebel 3 and lebel 4 localing in OFF position.Or willl make the module abnormal .

## Receiver ( AP ) Video module AK567 user manual

RAK567 is a long range 5.8G WIFI video module with HDMI ,SDI or CVBS video outputting.

### PIN Definition

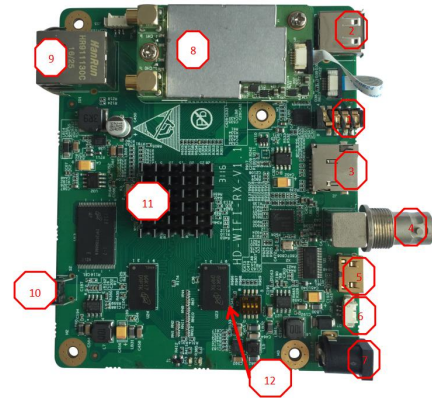

Label	Name	Description
1	CVBS	CVBS output interface
2	USB	USB output interface,reserved
3	TF card	TFcard .
4	SDI	Suopport 3G-SDI vedio output
5	Mini-HDMI	Support high definition vedio HDMI output
6	UART	High speed UART transparent transmission,Default Bound rate 115200.
7	DC power	9-24V DC power supply
8	WIFI	5.8G high-power WIFI module, double antenna,Highest Transmit power:23dB
9	Ethernet	1000M full-duplex Ethernet Interface
10	Button	Functional button, WPS Configuration、restore factory etc.
11	CPU	CPU
12	DIP switch	Function selector switch, exchange channel

After power on the module,please scan the softap' s name : FS\_5G\_AP\_xxxxxx or **Flylink\_XXXXXX**( **please make sure your smartphone supporting 5G SSID** ) . X means MAC address.

Android



IOS



<https://www.pgyer.com/rakvideotest> Search **RAKVIDEO** in APP STORE

## RAKVideo APP user manual

**Note : Please make sure your smartphone supporting 5G WIFI !**

1 , Firstly, power on the receiver and transmitter and waiting the blue LED light more than 10s. Open your smartphone' s WIFI setting and connect the receiver' s SOFTAP name ( FS\_5G\_AP\_XXXXXX or Flylink\_XXXXXX ) .



2 , Please make sure your transmitter' s blue LED lighting more than 10s.open RAKVIDEO app and waiting APP find a new device ,such as named 67054f device.blue color means the device is online .if you don' t find the new device ,please click the refresh icon in the top-right position.

**Note: please don' t click the add icon. It is not using for Flylink HD product.**



3 ,Suggest select the software Encode and that have good compatibility. The default password is admin ,and connect to view the video. The smartphone' s landscape mode will make the video full-screen play.



4 , Flylink HD can support local video play and record and serial port data interaction.the default video resolution is 720P. Temporary does not support SD record.

